



## PHANTOM OVERSIZED DOOR SCREEN

# CARE & MAINTENANCE

*We're really proud of our retractable screens –  
but then you'd probably expect us to say that!*

One of the great things about Phantom's retractable screens is they need minimal maintenance. As the screens are retracted when not in use, they stay in their housings during wet and cold months. We recommend cleaning the screens once or twice a season to eliminate any small dust particles in the mesh.



**PHANTOM<sup>®</sup>**  
S C R E E N S

# PHANTOM OVERSIZED DOOR SCREEN

Following the guidelines below will extend the life of your screen and ensure years of worry-free service.

## Cleaning tips:

- ☐ **Ensure tracks are kept free of dirt and debris.** Simply vacuum along the track to remove any dirt and debris that may be caught in the track.
- ☐ **Lubricate the tracks** with Phantom's greaseless silicone spray.
- ☐ **Clean mesh fabric, housing, tracks, slidebar and handle with water, mild detergent and a soft brush or cloth** – not with harsh chemicals or a pressure washer.
- ☐ **Allow mesh to dry** before rolling it back up into the housing.

## Operating tips:

- ☐ Screens should be retracted into their protective housing when not in use to preserve and extend the life of the mesh.
- ☐ Screens may retract suddenly – keep hold of the slidebar or handle during operation.
- ☐ Wind will affect the screen's operation. We suggest you keep the screens retracted into their protective housing in windy conditions.



Contact your Phantom Screens Representative at **1-888-PHANTOM** or visit the Support section at **phantomscreens.com** for more information.